




PART# OASU3716004 FITMENT GUIDE

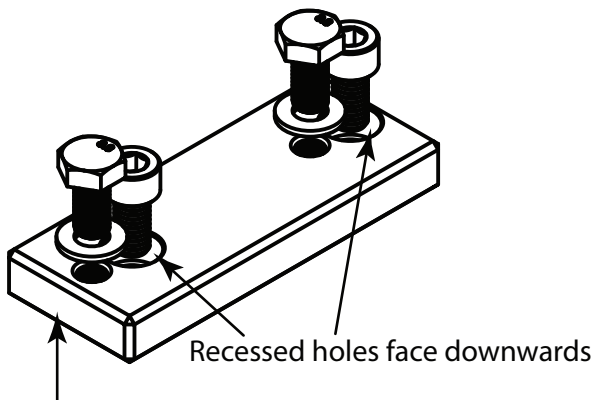

Install with this face towards the front of the vehicle.

1. Remove the factory sway bar D brackets from both sides of the vehicle.
2. Position the spacers between the sway bar D bush and the chassis as described above.
3. Secure both spacers in place with the hex socket cap screws.
4. Secure the sway bar D bracket in place with the new M10 bolts and flat washers.

Finished product should look like this.

